

count on our products. trust in our people.



HT-1063

PRODUCT DETAILS

Highland Tank Hold Down Straps are primarily designed to secure storage and process vessels to permanent anchoring in underground installations. They can also be used in aboveground applications.

Even when completely full of liquid, steel vessels may float if groundwater is present in the area. Straps are designed to work in conjunction with adequately sized concrete anchoring to counteract the tank's natural buoyant forces.

Highland Strap Designs


Highland manufactures Steel Hold Down Straps in three different designs to accommodate specific installation requirements.

- Standard
- Safety
- Dead-Man

For safety and shipping purposes,

on tanks larger than 8'-0" in diameter, Highland Tank will only supply safety style steel hold-down straps.

Coated mild-carbon steel is used in the fabrication of all steel strap designs. Stainless or galvanized steel are also available. Each strap design uses adjus able turnbuckles as the tensioning system for securing tanks in place Neoprene rubber liners for electrical isolation and tank protection are supplied with all steel hold-down straps.

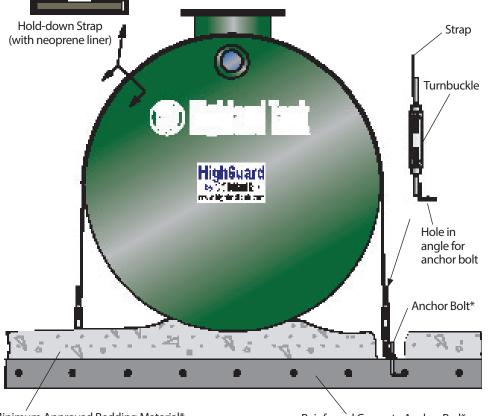

Animum Approved Bedding Material* ntact factory if using more than 12")

Reinforced Concrete Anchor Pad*

taller supplied equipment

Standard Hold Down Strap Manufactured from mild-carbon steel with an adjustable turnbuckle and angle clip on each end, they are a reliable choice for securing tanks to concrete anchors either underground or aboveground. Neoprene rubber liners for electrical isolation and tank protection are supplied with all steel hold down straps.

Standard straps are sized so that when the turnbuckles are completely closed, there will be six (6") inches between the anchor pad and the tank bottom. Turnbuckles can be opened to allow up to twelve (12") inches of clearance.

Maximum diameter for standard steel straps is 10'-6".

Standard Strap Installation Standard onepiece hold-down straps are not available for tanks above 8' diameter. Refer to specific installation instructions for straps supplied.

Standard hold-down straps are installed after the vessel has been placed and supported by backfill toprevent movement.

Prepare straps with neoprene liners at a convenient location. Secure liners to straps with non-metallic tape to prevent shifting during installation.

Open turnbuckles to maximum capacity for fitting to vessel. Confirm strap locations on approved drawing prior to installation and place straps accordingly. Straps must be mechanically lowered into

> Greensboro, NC 2700 Patterson Street Greensboro, NC 27407-2317 336.218.0801

Lebanon, PA 2225 Chestnut Street Lebanon, PA 17042-2504 717.664.0602

position being careful to prevent any sharp edges of straps from scratching the tank surface. If scratches do occur, repair according to manufacturer's instructions.

Lower strap into excavation positioning angled plate over anchor bolt. Secure strap in place with supplied washers and nuts.

Secure the vessel in place by tightening turnbuckles evenly being careful to prevent vessel from turning or rolling from side to side. This may require multiple personnel or multiple trips from side to side.

Recheck tightness of all straps prior to back filling excavation.

Friedens, PA

814.443.6800

1510 Stoystown Road

Friedens, PA 15541-7402



Stoystown, PA One Highland Road Stoystown, PA 15563-0338 814.893.5701 Manheim, PA 4535 Elizabethtown Road Manheim, PA 17545-9410 717.664.0600

Watervliet, NY 958 19th Street Watervliet, NY 12189-1752 518.273.0801

PROUDLY MADE IN AMERICA